


MP1


User Manual V1.1 2023.11

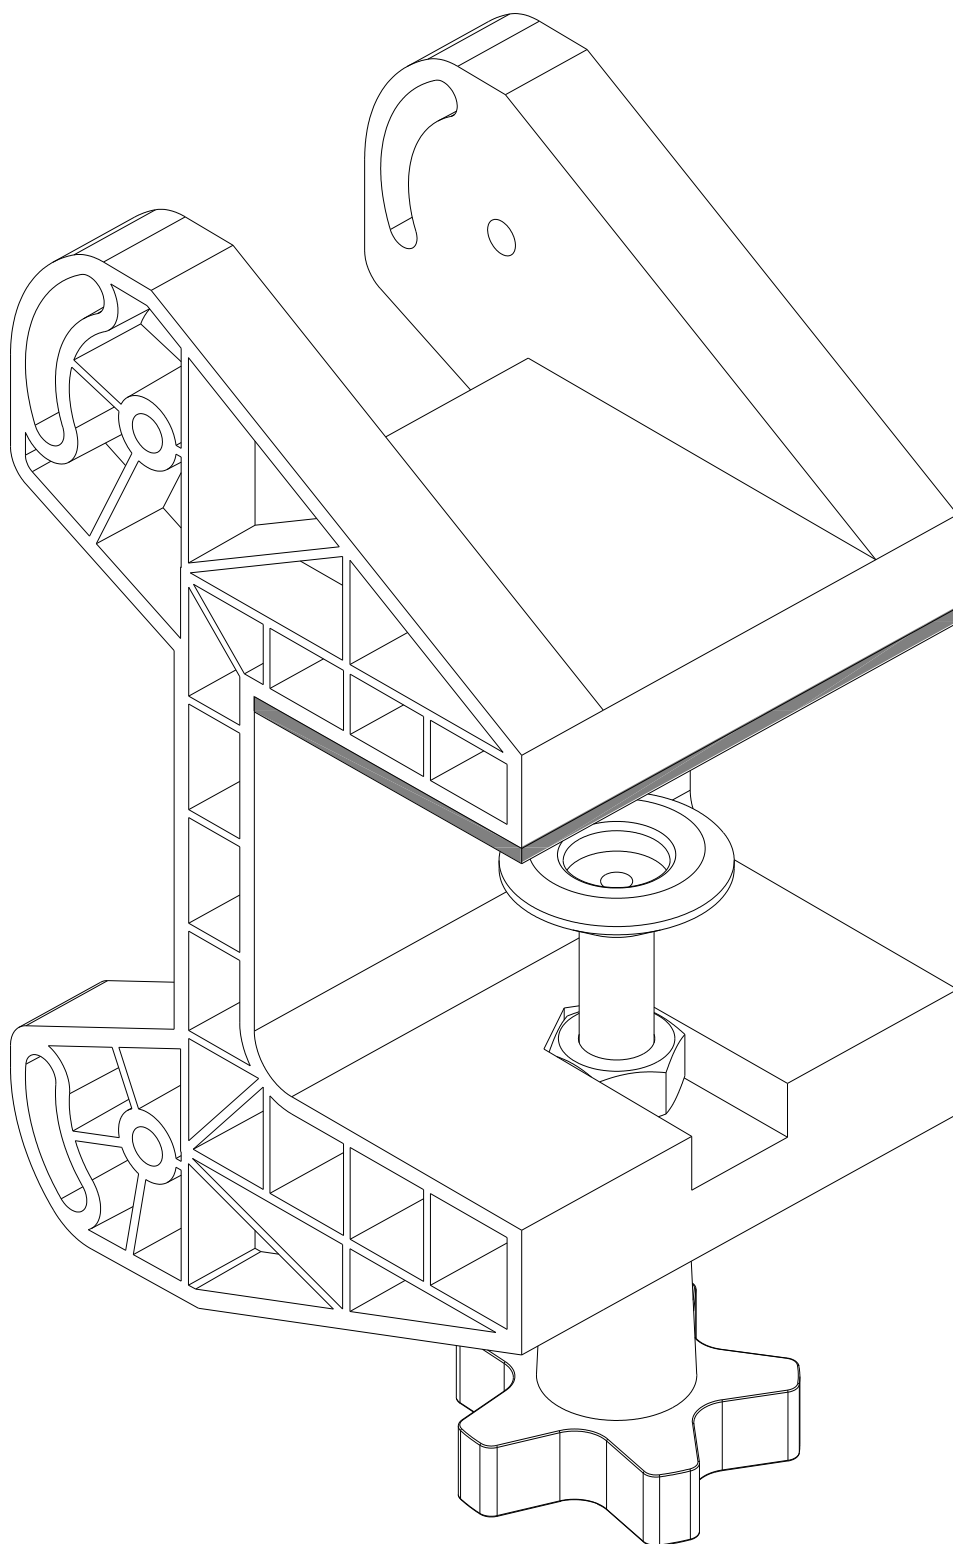

Catalogue:

Package list.....	1
1 Parameters	2
1.1 Performance parameter.....	2
1.2 Applicable models.....	2
1.3 Dimensions	2
1.4 Installation dimensions.....	3
2 Installation method	4
2.1 Install UFC1+HUD1	4
2.2 Install MFD1+D1	6
2.3 Connect UFC1+HUD1+MFD1+D1	7
3 Adjustment method.....	11

Package list

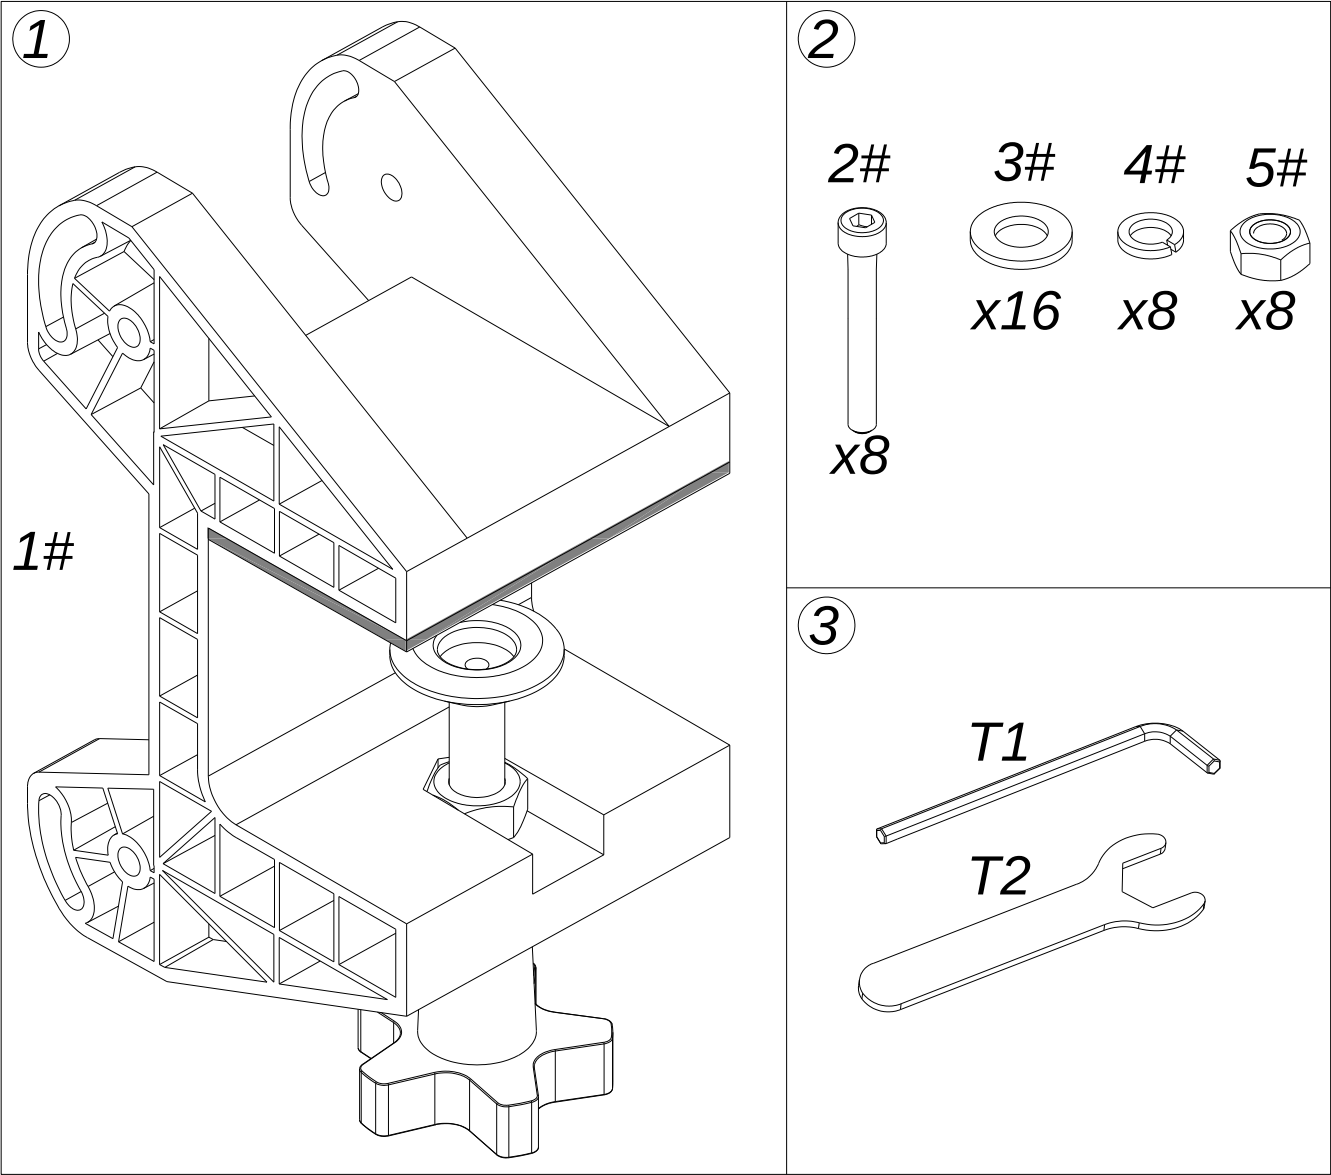

① Supporting holder MP1 (1#) 1


② Accessories (2#~5#) 1

2#	Hexagon Socket Head Cap Screws M5*55	3#	Plain Washers M5*10*1
4#	Single Coil Spring Lock Washers M5	5#	Hexagon Nuts M5

③ Tools kit (T1、T2) 1

1 Parameters

1.1 Performance parameter

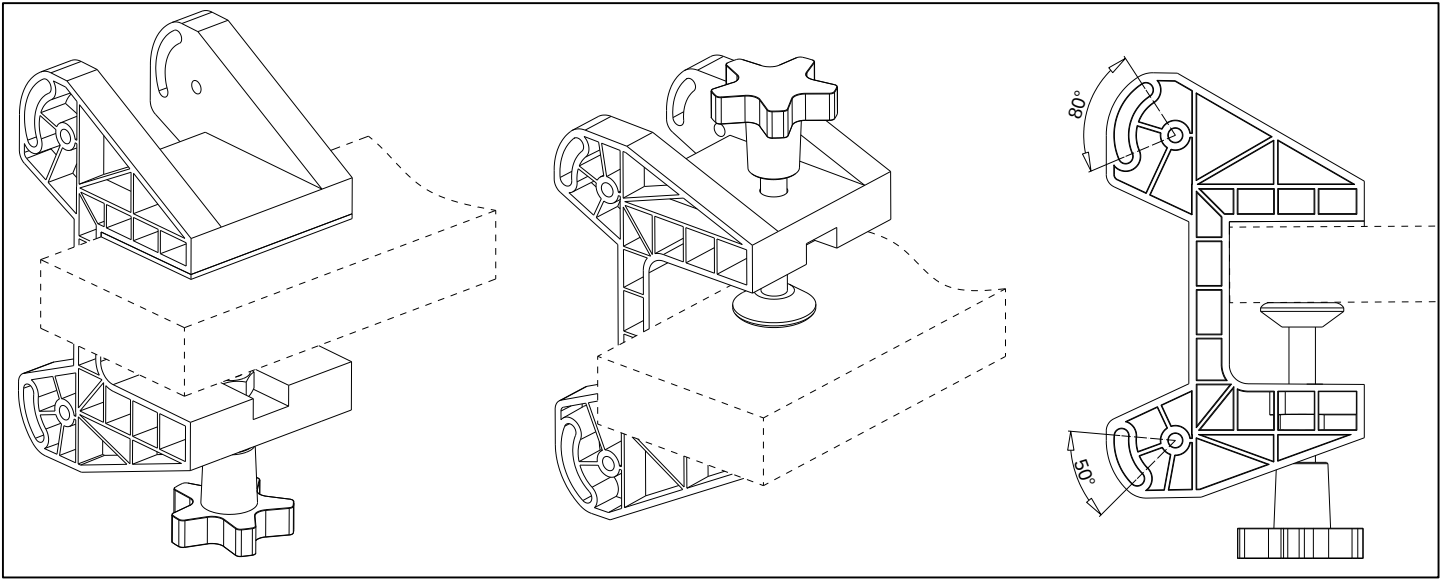


- ① 2 installation method (Upright or upside down);
- ② Initial installation adjustable angles: 50° of 80° .

1.2 Applicable models


Panels: UFC1 (or UFC1+HUD1), MFD1 (or MFD1+D1).

1.3 Dimensions

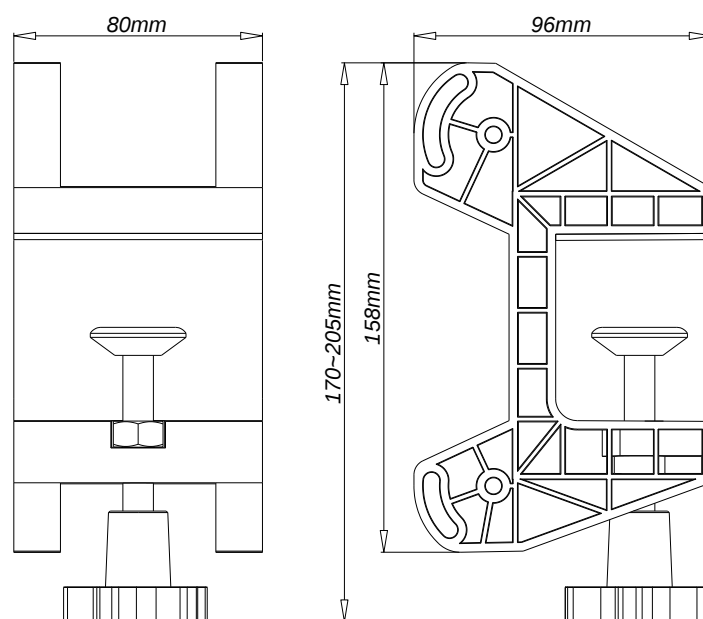

Mass : 0.48kg=1.06lb.


1.4 Installation dimensions

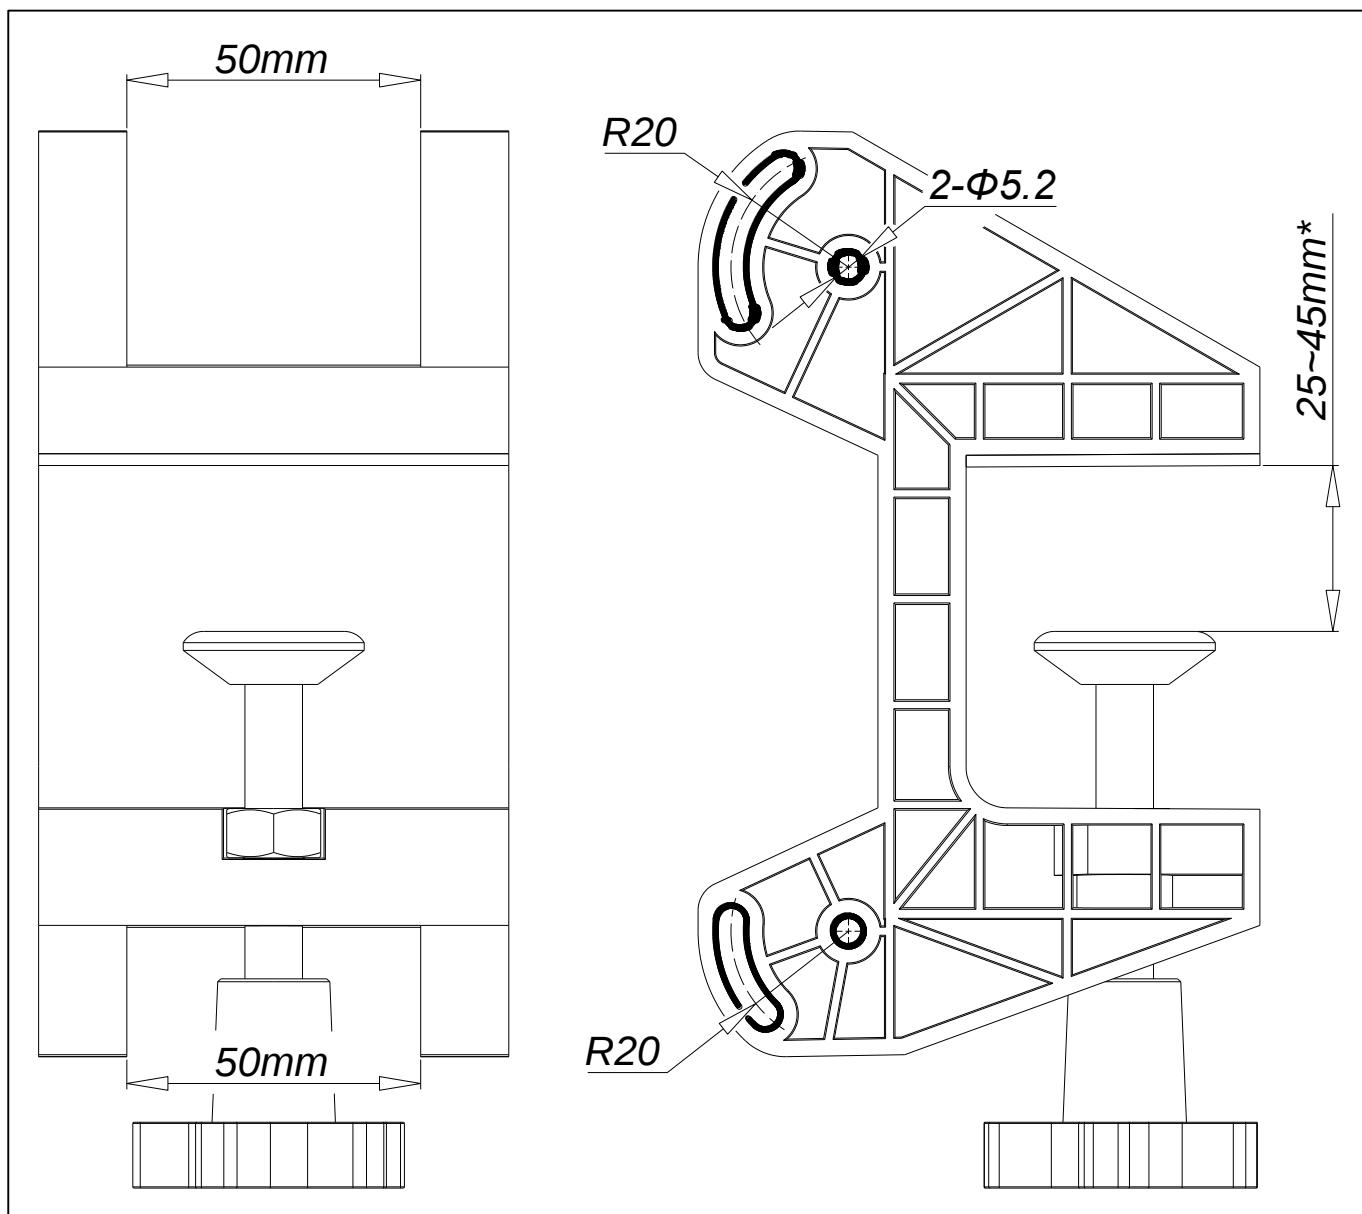


* Table thickness: 25~45mm.



2 Installation method


2.1 Install UFC1+HUD1

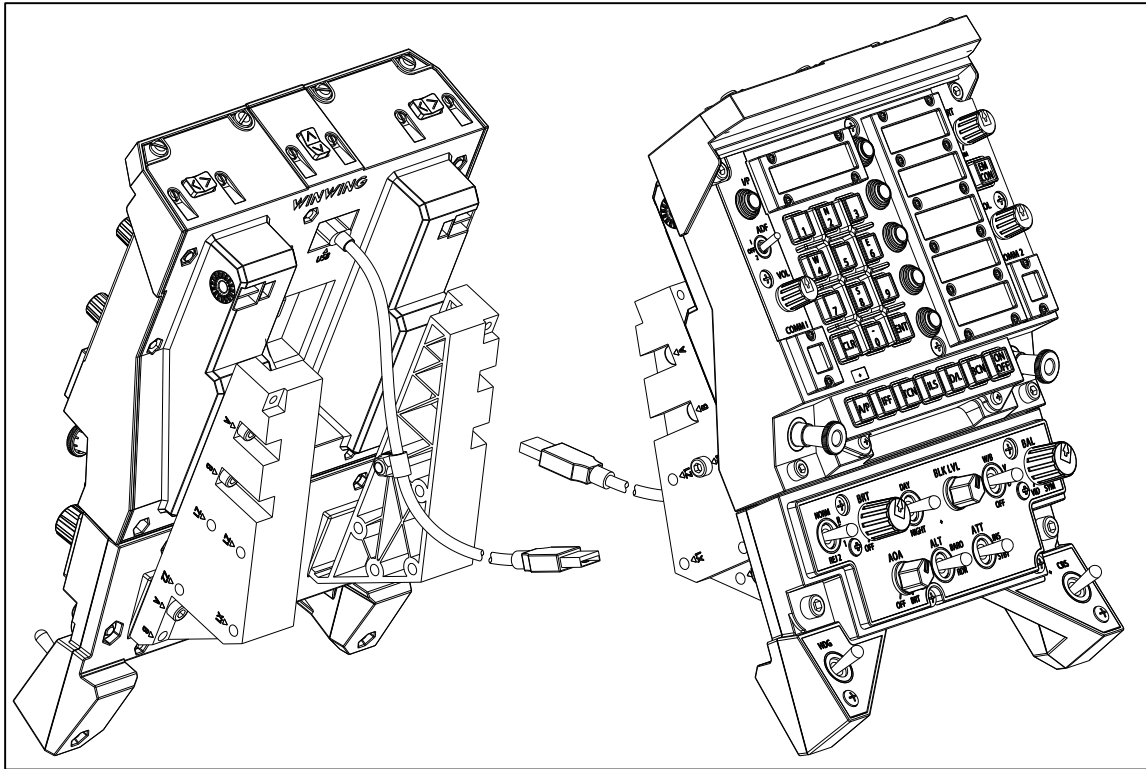

* To connect UFC1+HUD1, please refer to HUD1 User Manual.

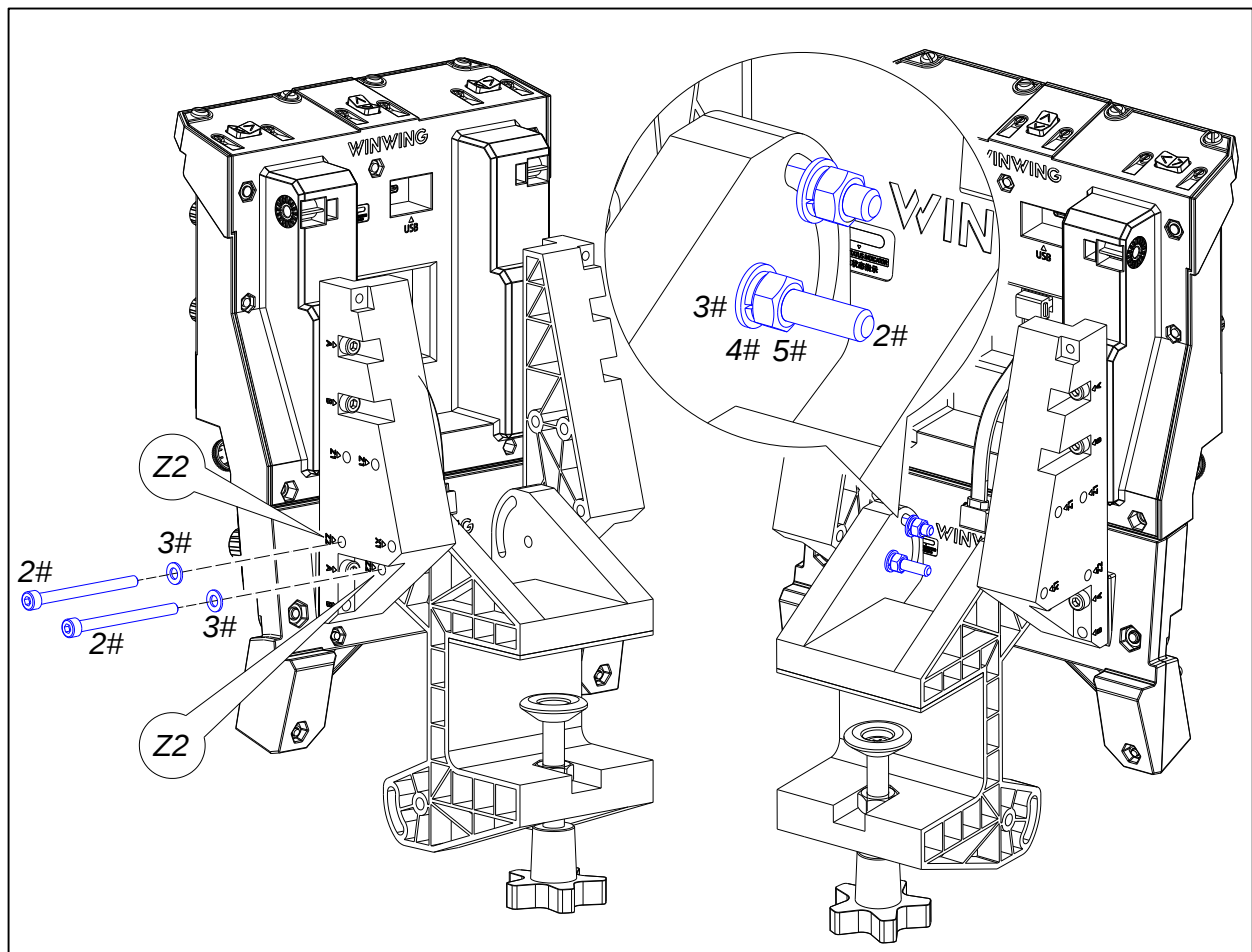

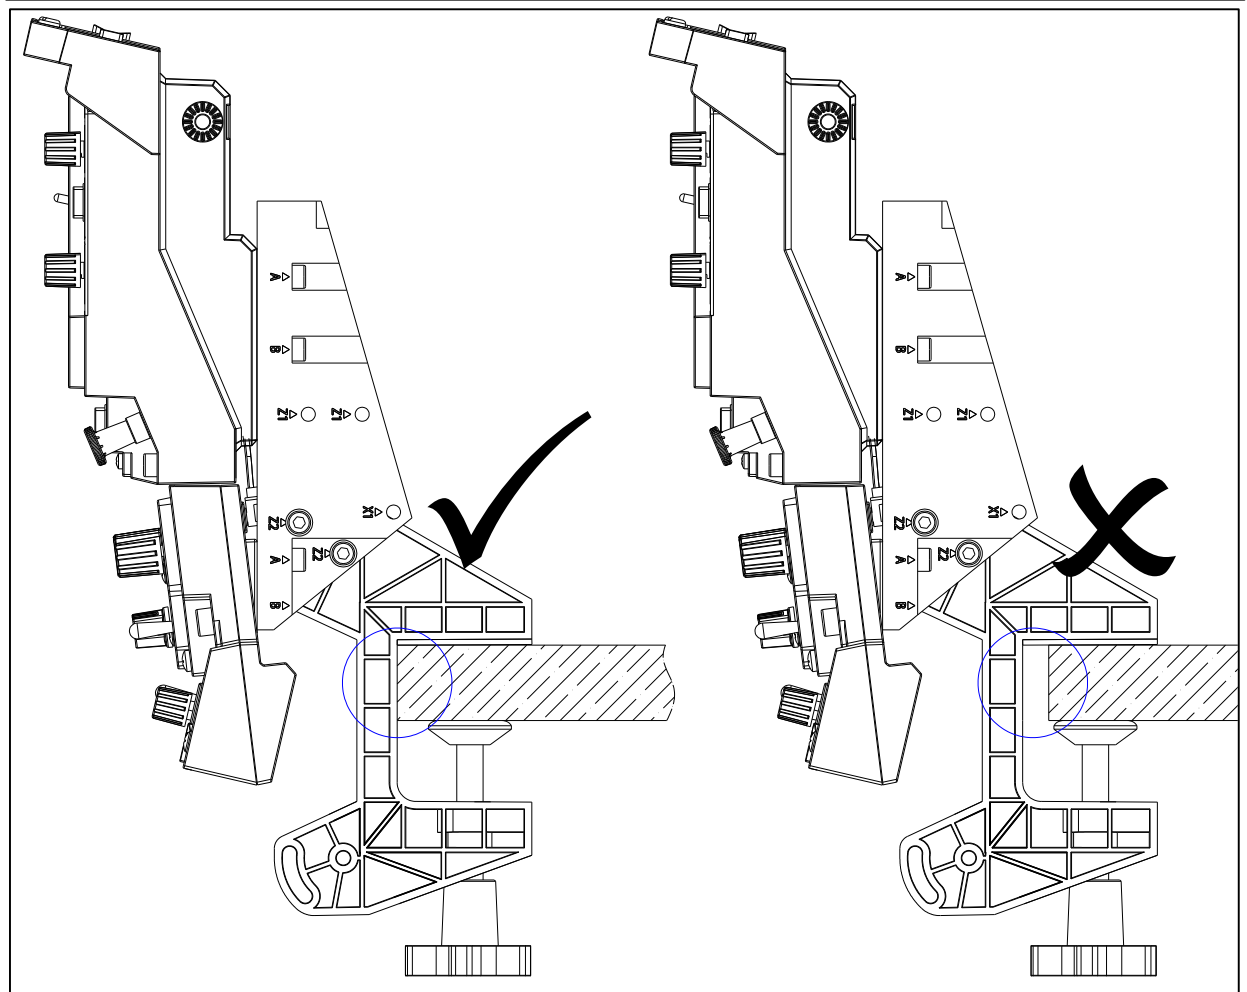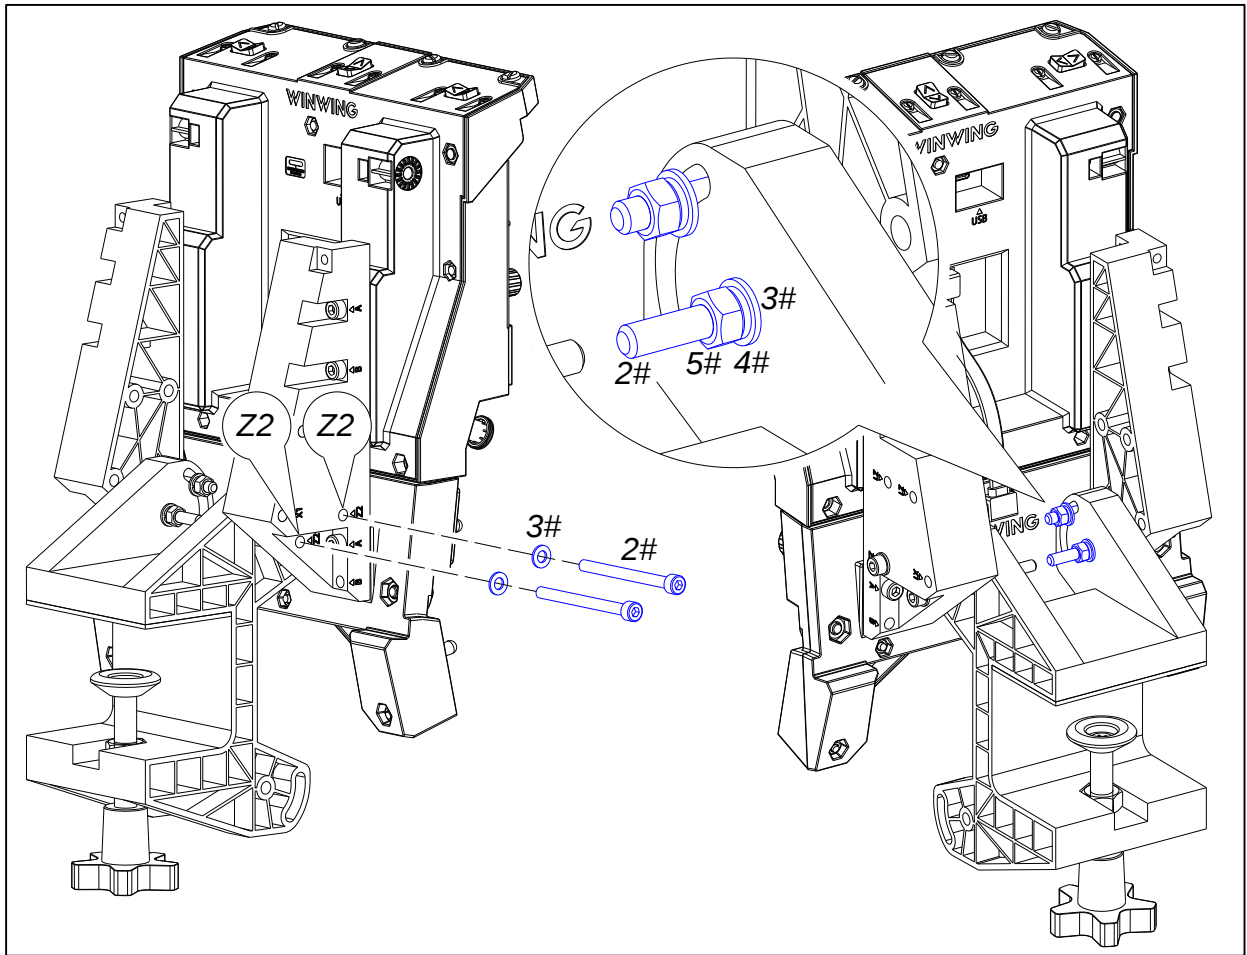

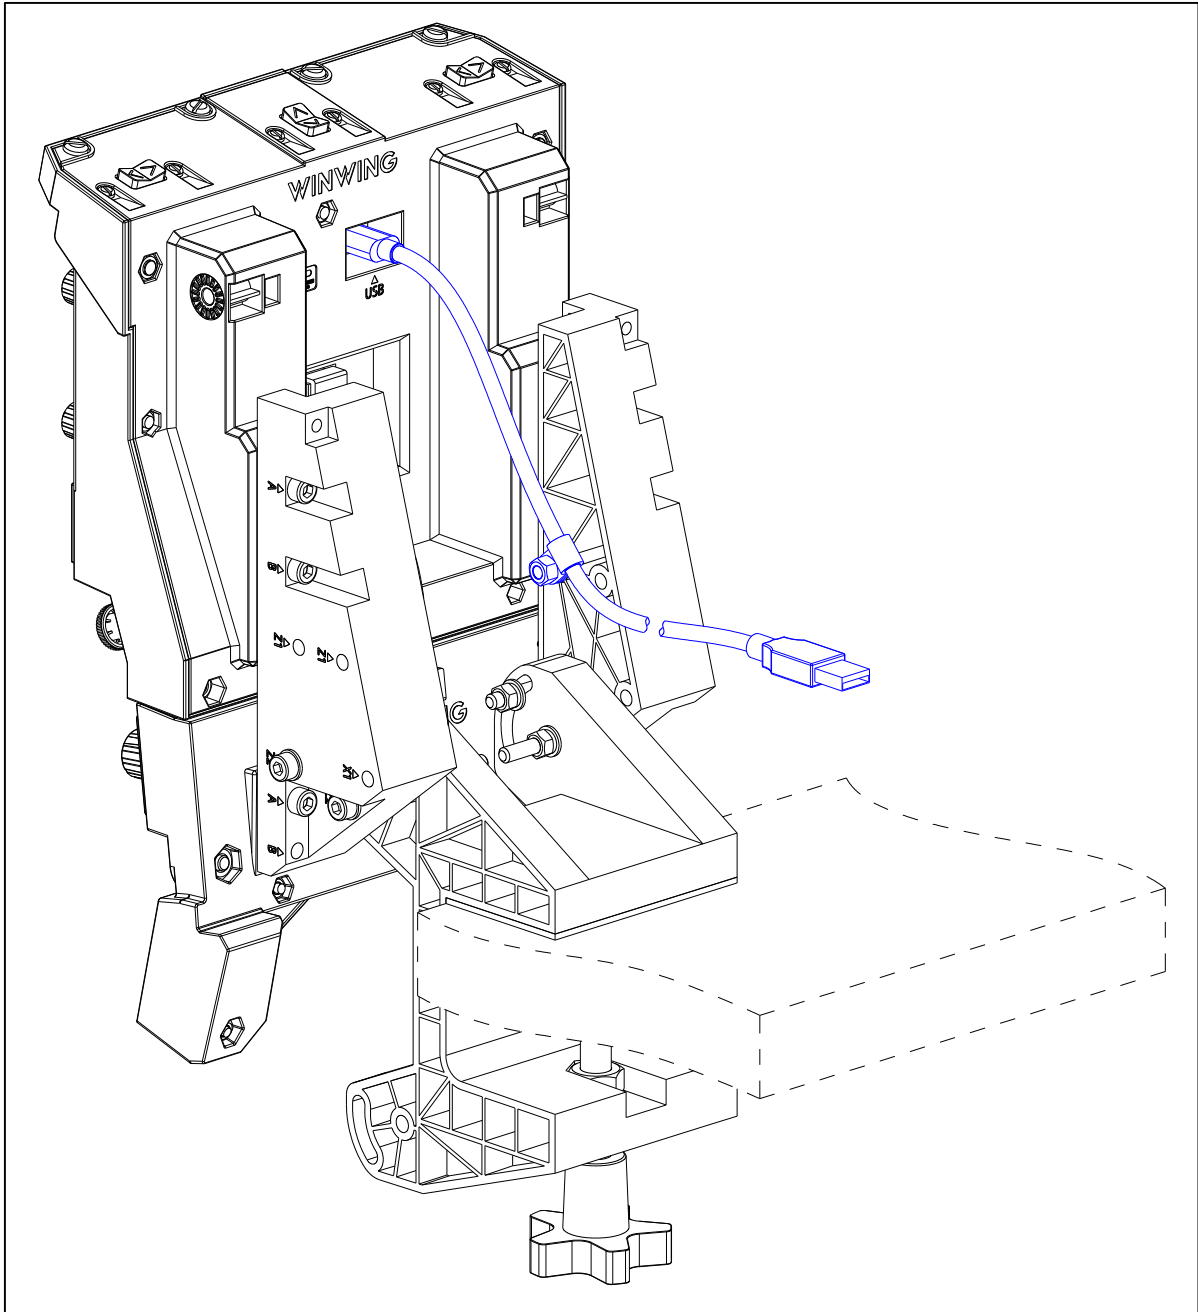


- ① Connect UFC1 and HUD1 as per HUD User Manual;
- ② Put the screws through the Z2 holes and fix the panel with MP1, please tighten the screws properly, don't over tighten them;
- ③ Clamp the MP1 holder on the table, just tighten the screw properly, don't over tighten it;
- ④ Connect the panel to the computer by a data (USB) cable, all holes unoccupied on the holder can be used for wiring.


2.2 Install MFD1+D1



Please refer to Section 4.4 in D1 User Manual.


2.3 Connect UFC1+HUD1+MFD1+D1

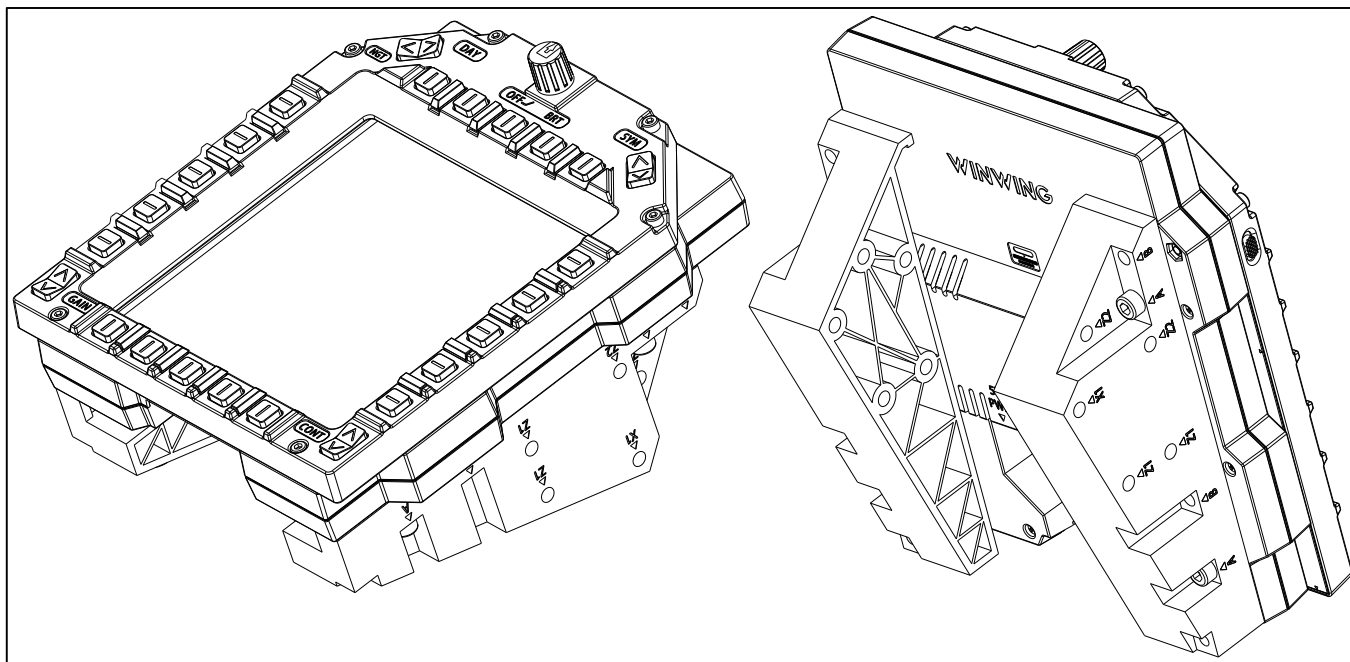


* To connect MFD1 and D1, please refer to D1 User Manual.

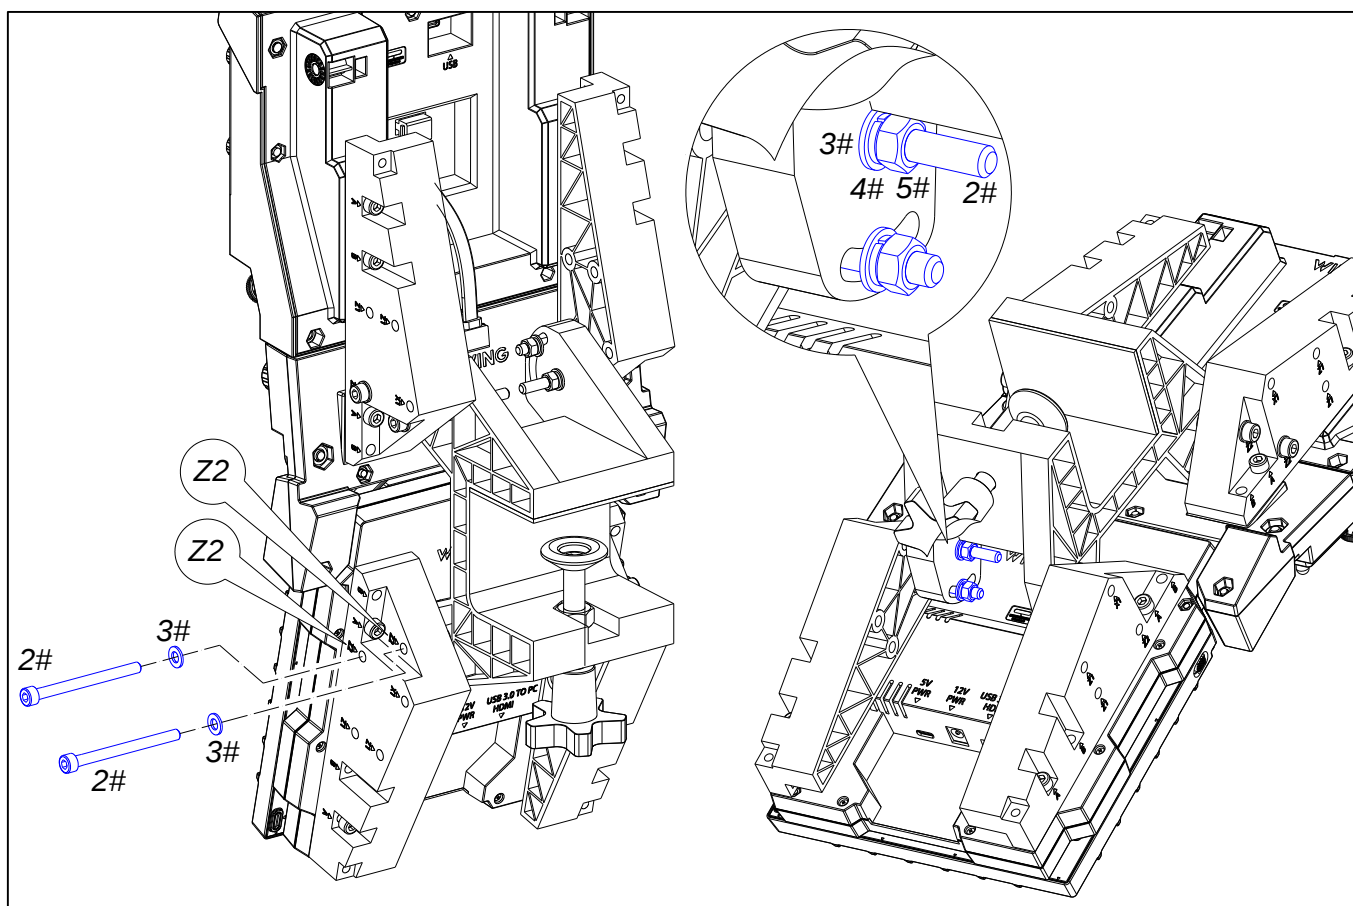

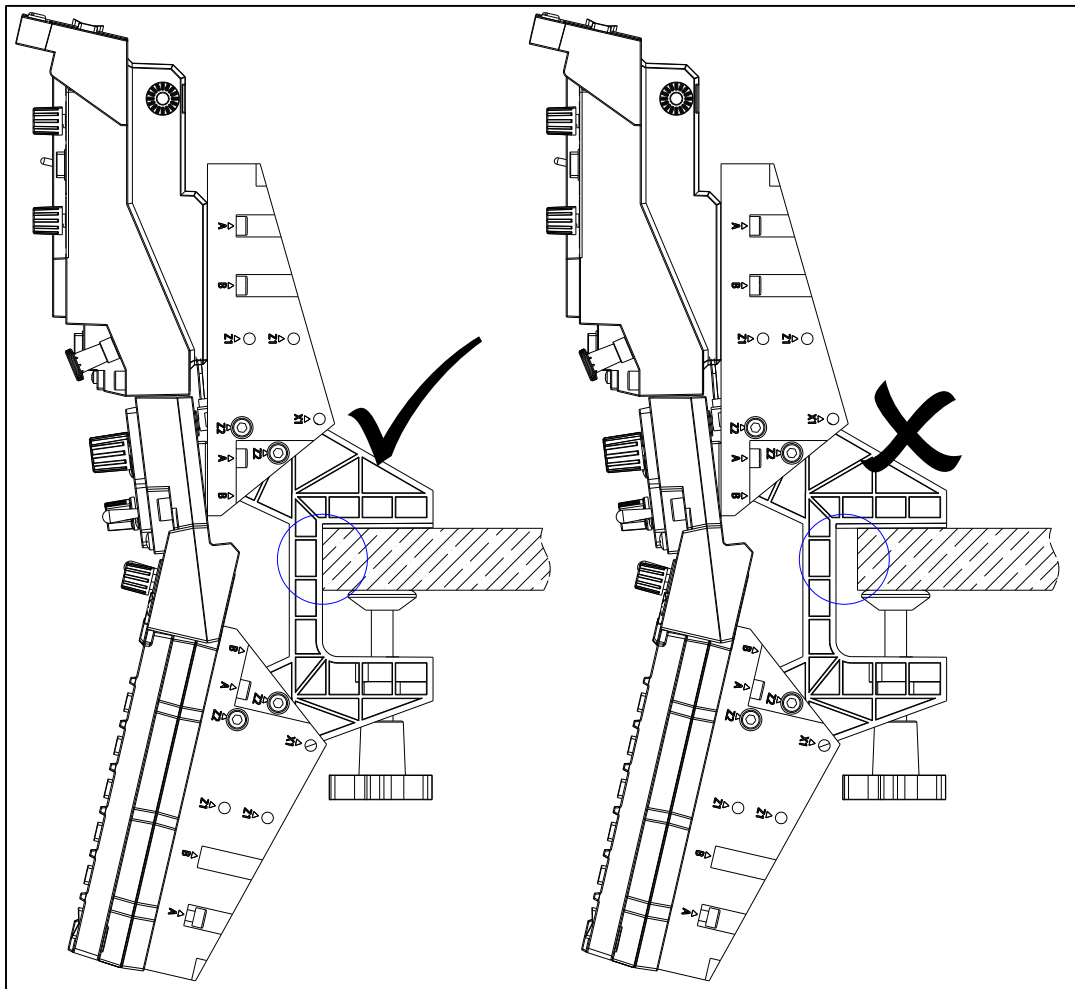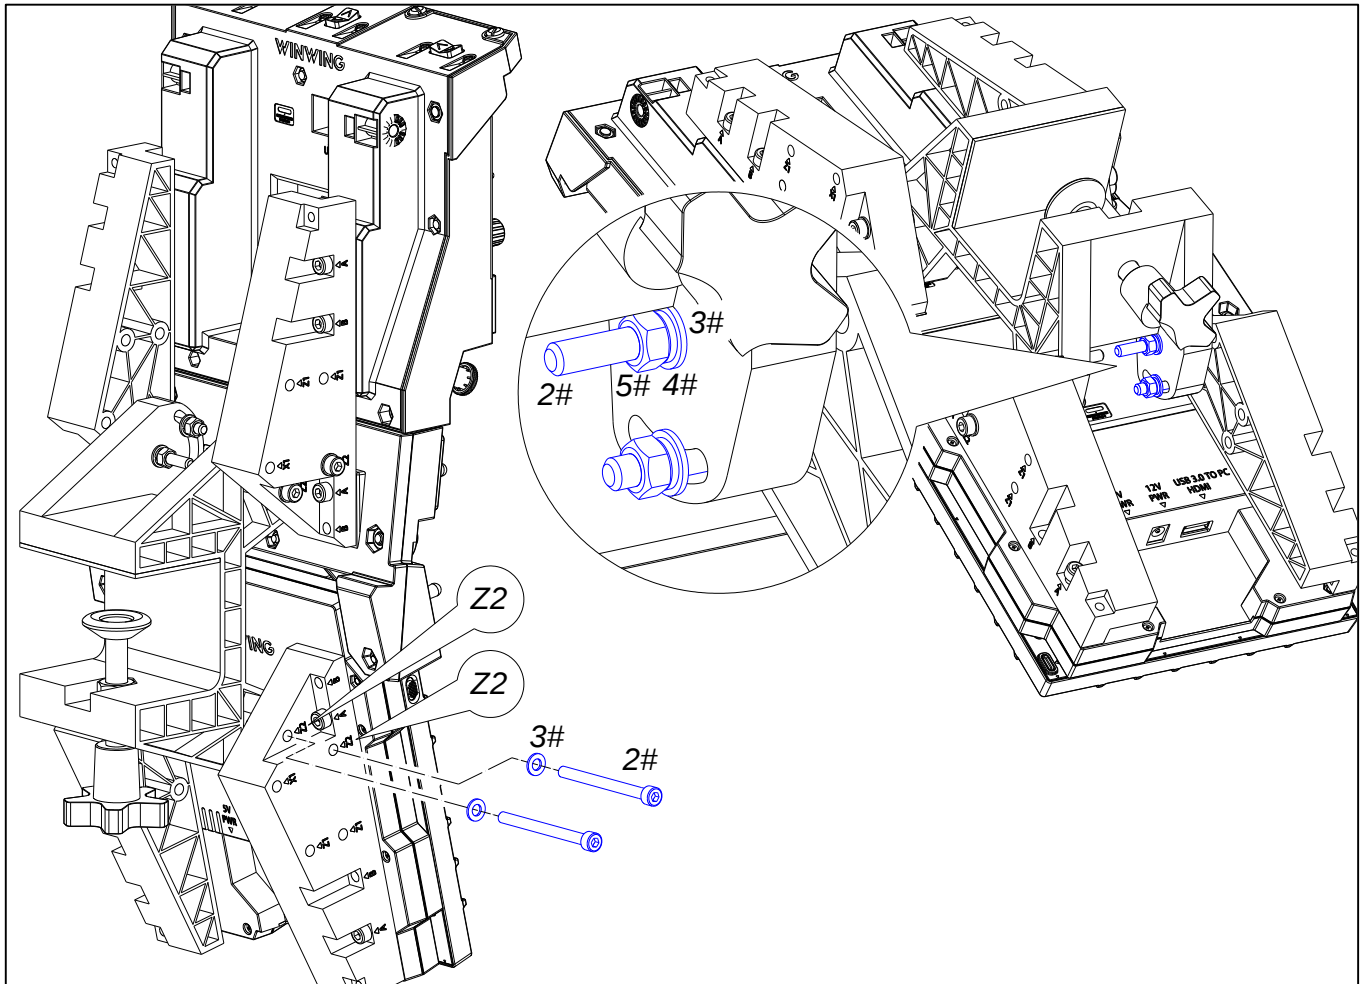

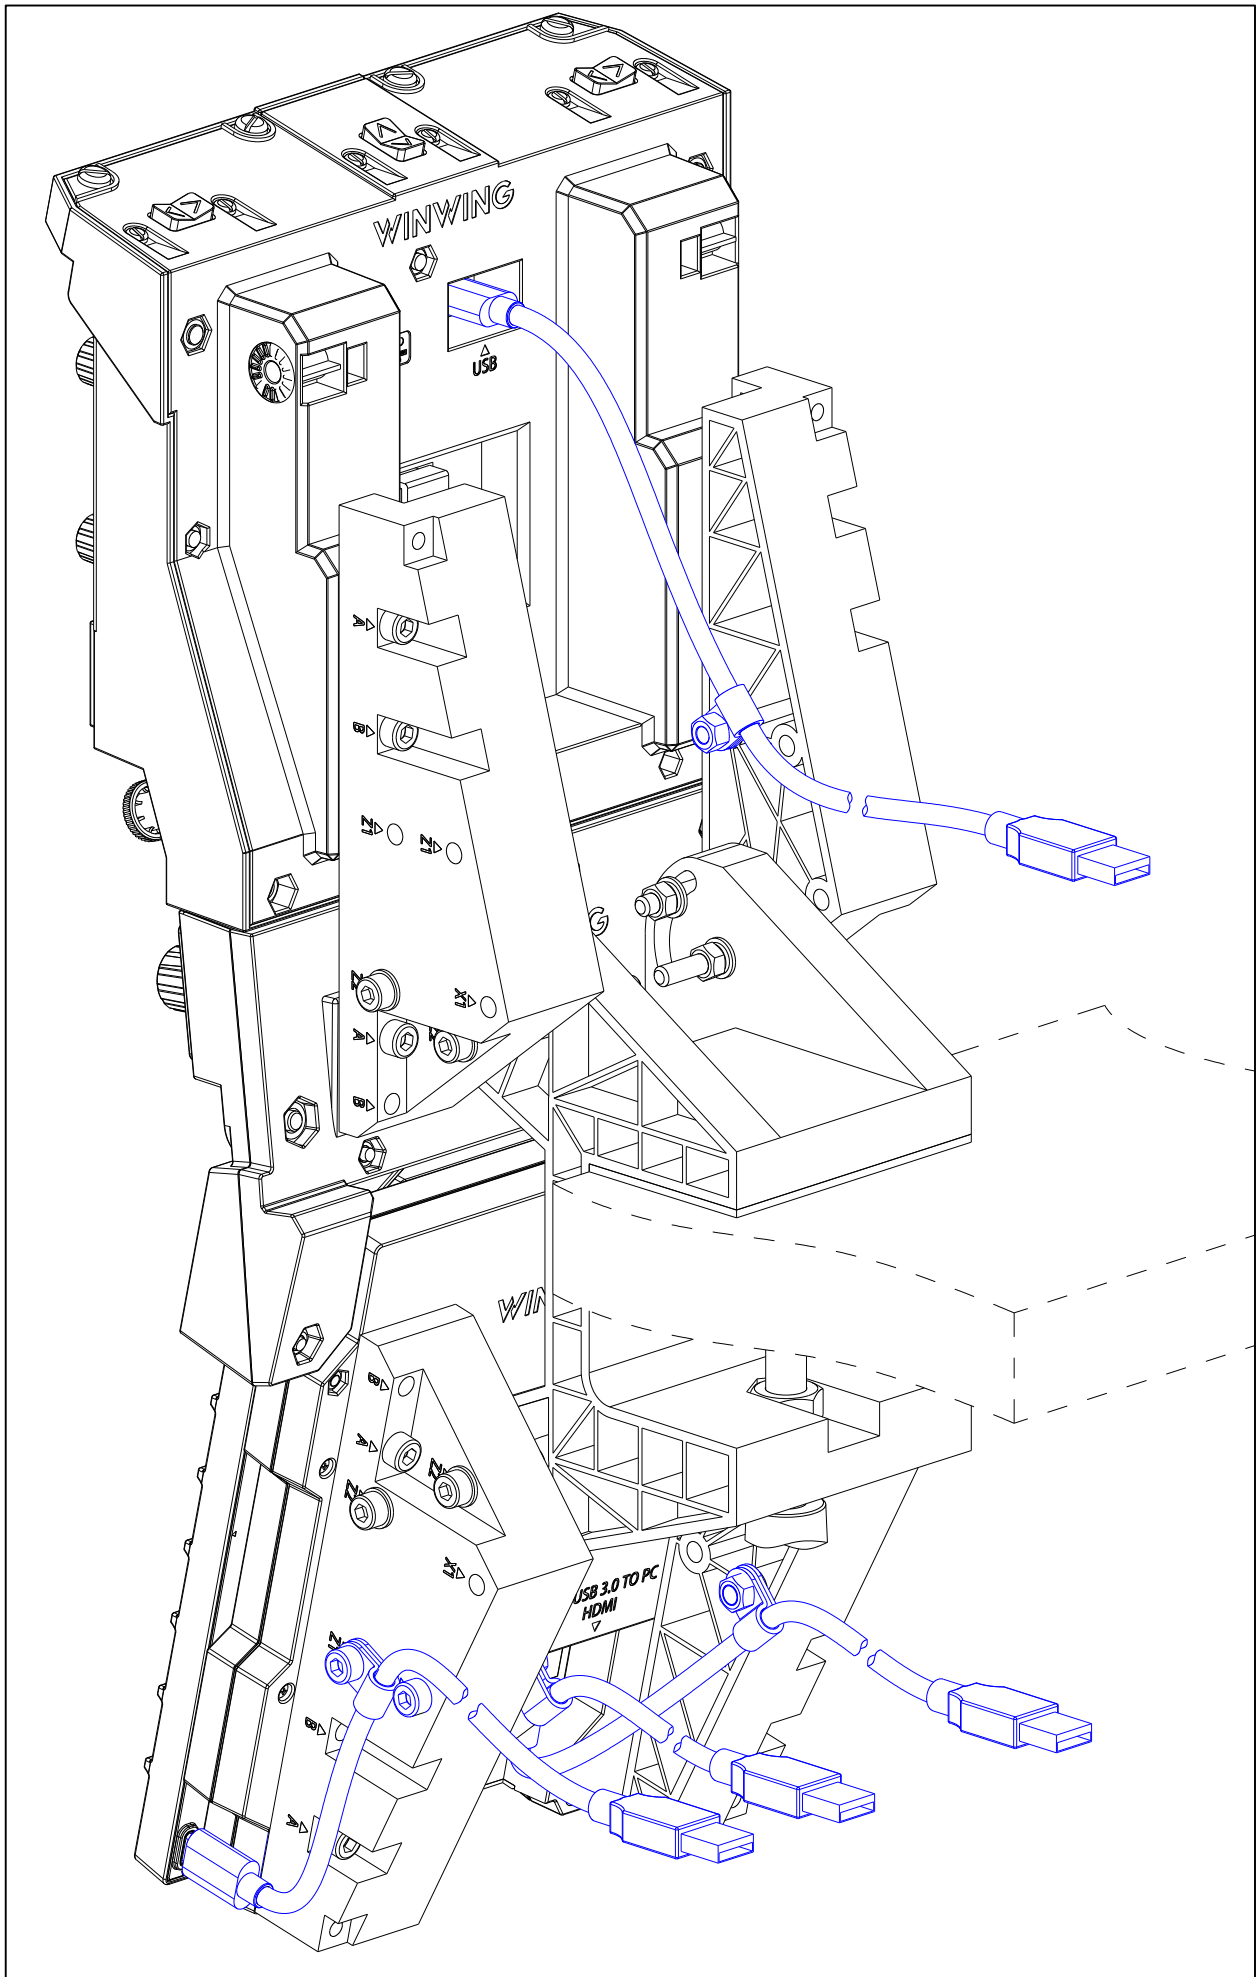

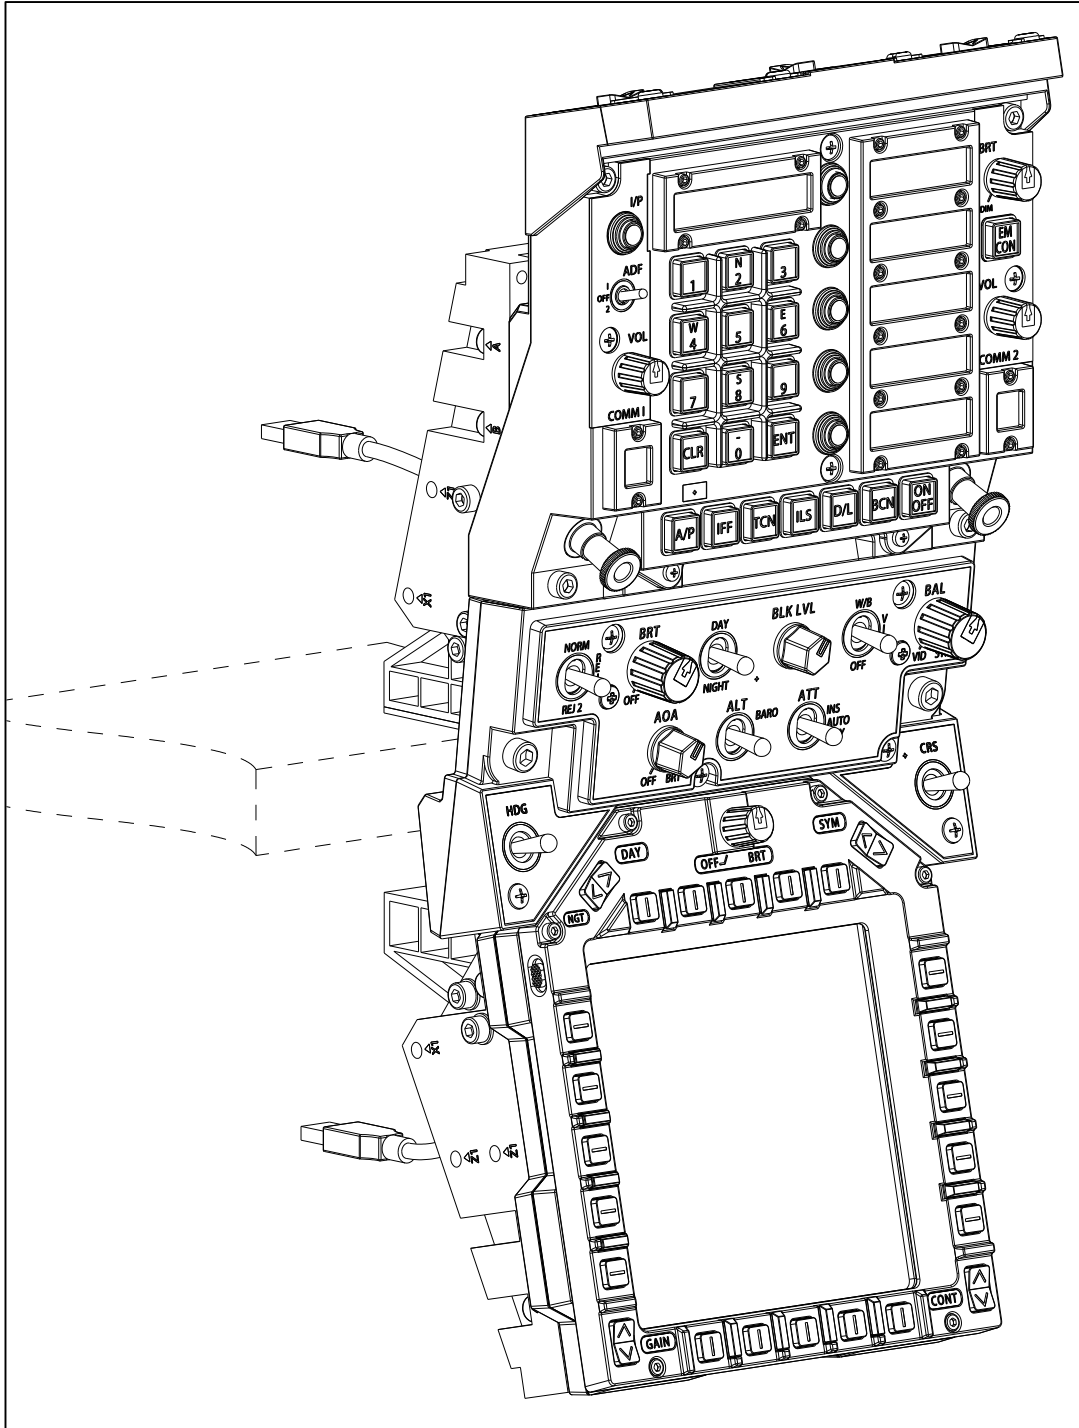

- ① Mount the UFC1+HUD1 to MP1 as per Section 2.1;
- ② Connect the MFD1 and D1 as per D1 User Manual;
- ③ Put the screws through the Z2 holes and fix the panel with MP1, please tighten the screws properly, don't over tighten them;
- ④ Clamp the MP1 holder on the table, just tighten the screw properly, don't over tighten it;
- ⑤ Connect the panel to the computer by a data (USB) cable, all holes unoccupied on the holder can be used for wiring.

3 Adjustment method

\

* This is the final version of the manual,all update will be made online.

成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

High-tech International Enterprise Zone No.19 Building,Changshengqiao Road

1111#, Pidu District, Chengdu,China 610000.