
**PTO** 

# **User manual V1.0** 2020.10

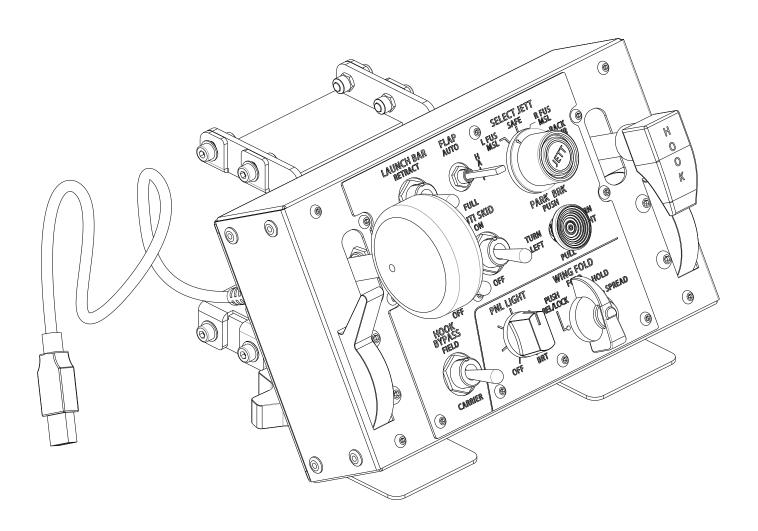

## Contents:


1	Contents inside the box	1
2	Functions	2
	2.1 Display Function	2
	2.2 Bottom Function	2
3	Dimensions	3
4	Mounting method	3
	4.1 Desktop	3
	4.2 Clipper	4
	4.3 Independent Mounting	4
	4.4 Mounting	4
5	Installation	5
	5.1 Desktop mounting	5
	5.2 Desktop clipper mount	6
	5.3 Panel assembly instruction	8
	5.4 Attach the panel to mount	10

### 1 Contents inside the box

1) P10 panel with 6 feet wire		
② Mount	1	
(4 types of desk mount in parts)		
Mount is not yet assemble, refer to part 5 for assembly instruction		
③ Screw bag 1	1	
(M4*14 screw X 8, M4 plate X8		
Flat M4*9*1 X 8, Normal Nut M4 X 8)		
④ Screw bag 2	1	
(M5*10 X2, M5*16 X4, M5 plate X 4		
Flat M5*10*1 X6, Normal Nut M5 X 4)		
5 Tool bag	1	
(4mm allen wrench X1, 3mm Allen Wrench X 1,		
7mm Wrench X1, 8mm Wrench X 1,17mm Wrench X 1)		
6 Big Screw X1	1	
Of Glue tape	1	
8 Instruction manual	1	


#### 2 Functions

### 2.1 Display Function

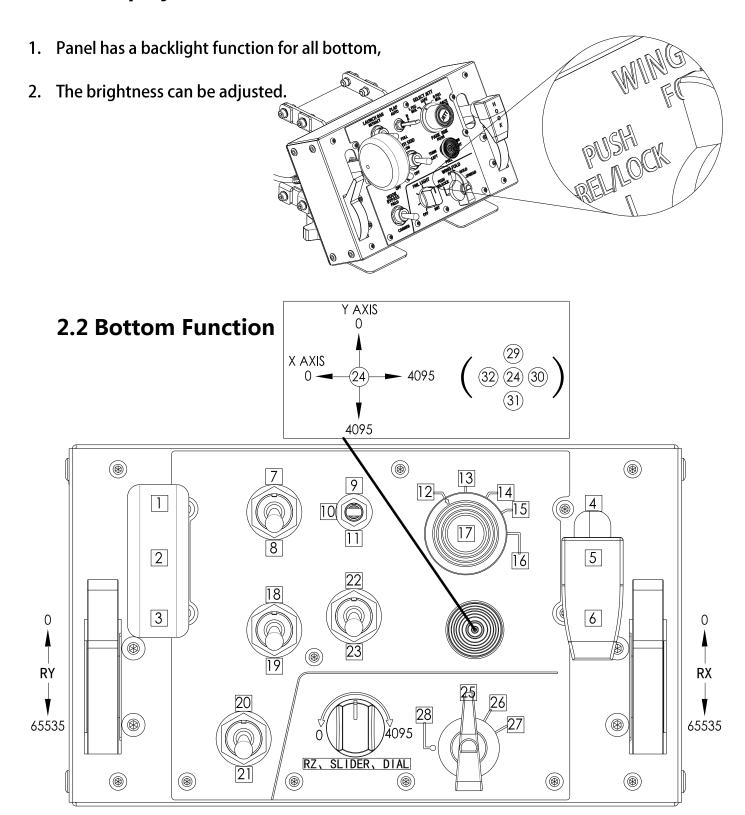

1. All switch on the panel can be used for binding

#### 3 Dimensions

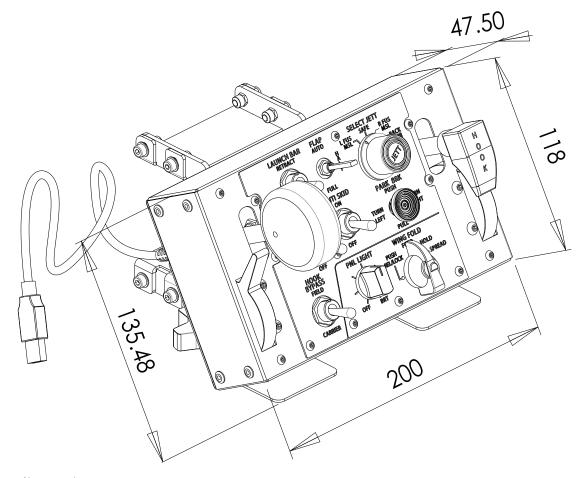


**Product dimension** 

200mm\*118mm\*47.5mm;


Weight about 2.8Lb

## 4 Mounting method


### 4.1 Desktop

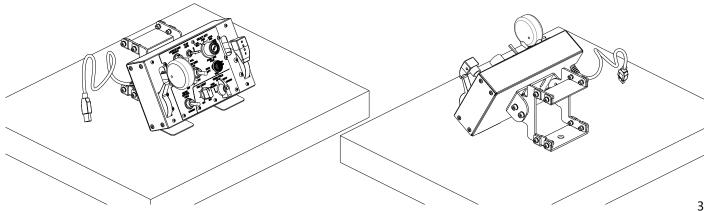


## 4.2 Clipper

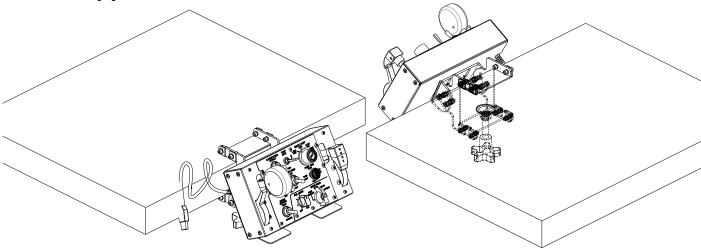

## 4.3 Independent Mounting

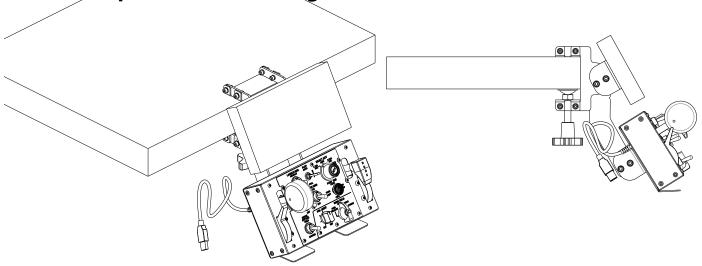

## 4.4 Mounting

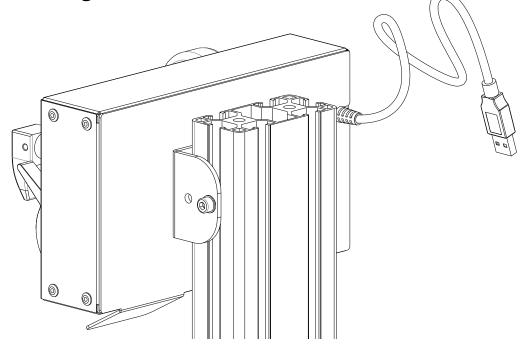

#### 5 Installation

#### 5.1 Desktop mounting

1. Assemble the mount like shown in the picture


by using 3mm Allen wrench and 7mm open-mouth wrench

- ① Mount #2 X 2
- 2 Mount #3 X 1
- 3 Mount #4 X 1 (Assemble like shown in picture)
- 4 Screw M4\*14 X 8
- 5 M4 Plate X 8
- 6 Flat M4\*9\*1 X 8
- Normal Nut M4 X 8



by using 4mm Allen wrench and 8mm open-mouth wrench

- ① Mount # 1 X 1
- <sup>2</sup> Screw M5\*16 X 4
- 3 M5 Plate X 4
- 4 Flat M5\*10\*1 X 4
- (5) Normal Nut M5 X 4
- 3. Attach the panel to the mount with 4mm allen wrench
  - ① Screw M5\*10 X 2
  - 2 Flat M5\*10\*1 X 8

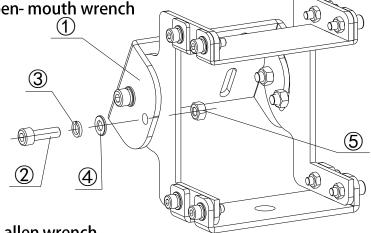

**(5)** 


(1)

2


3

7

6

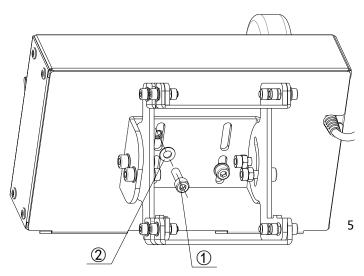

- 4. Attach the double side tape in the shade area, stand firmly on the desk.
  - ① Clean the table surface for better adhesive.
  - 2 Double tape can be cut to the shape you need \( \)
  - 3 For reuse the tape, wash with clean water, dry it up and re attach.

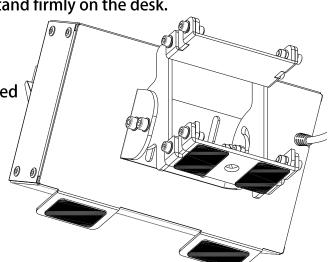

### 5.2 Desktop clipper mount

1. Assemble the mount like shown in the picture


by using 3mm Allen wrench and 7mm open-mouth wrench

- ① Mount #2 X 2
- 2 Mount #3 X 1
- **3** Mount #4 X 1 (Assemble like shown in picture)
- 4 Screw M4\*14 X 8
- 5 M4 Plate X 8
- 6 Flat M4\*9\*1 X 8
- 7 Normal Nut M4 X 8




by using 4mm Allen wrench and 8mm open-mouth wrench


- ① Mount # 1 X 1
- 2 Screw M5\*16 X 4
- 3 M5 Plate X 4
- (4) Flat M5\*10\*1 X 4
- 5 Normal Nut M5 X 4

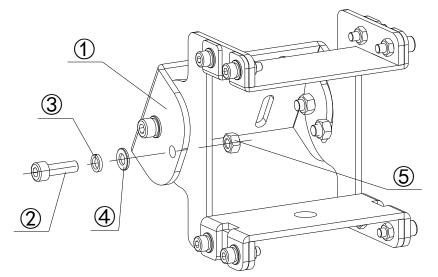


(1)

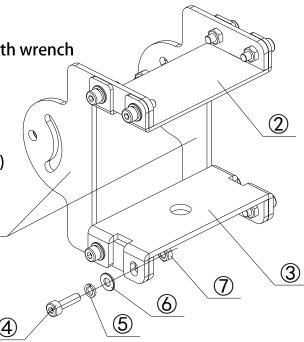


Install the twisting screw like the picture shown above with 4mm phillip screwdriver

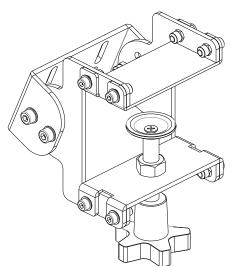

- 4. Assemble the mount as shown in picture above by using 4mm Hex wrench with
  - ① Hex M5\*10 X 2
  - ② Flat M5\*10\*1 X 2

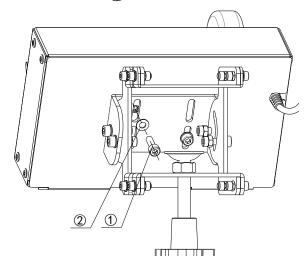

- 5. Place the whole set with clipper to the edge of the desk
  - 1 Twist the screw to the position that equipment will stand firm, do not over-tighten it or it may cause damage to the mount.

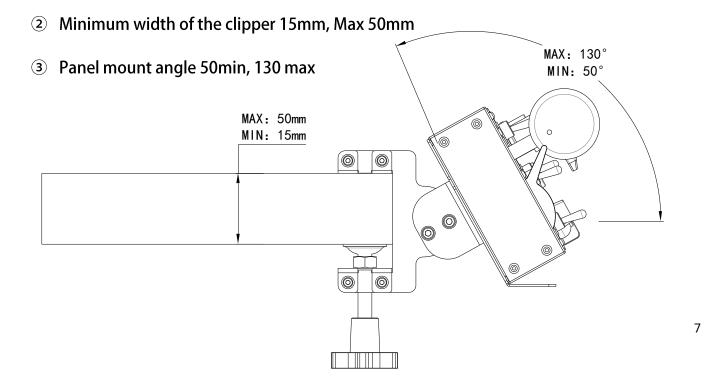


#### 5.3 Panel assembly instruction

1. Assemble the mount like shown in the picture

by using 3mm Allen wrench and 7mm open-mouth wrench


- 1 Mount #2 X 2
- 2 Mount #3 X 1
- 3 Mount #4 X 1 (Assemble like shown in picture)
- 4 Screw M4\*14 X 8
- 5 M4 Plate X 8
- 6 Flat M4\*9\*1 X 8
- O Normal Nut M4 X 8
- Assemble the amount like shown in the picture
  by using 4mm Allen wrench and 8mm open-mouth wrench
  - ① Mount # 1 X 1
  - 2 Screw M5\*16 X 4
  - 3 M5 Plate X 4
  - (4) Flat M5\*10\*1 X 4
  - 5 Normal Nut M5 X 4
  - 6 Connection panel # 1 X 1


Connection panel # 1 is an optional part required purchase separately.





- ① Mount 1-1 (not included)
- 2 Screw M5\*16 X4 (not included)
- **3** M5 Plate X 4 (not included)
- 4 Flat M5\*10\*1 X4 (Not included)
- 5 Normal Nut M5 X 4 (Not included)
- 6 Connection panel 2 X 2

Connection panel 2 is required purchase separately.

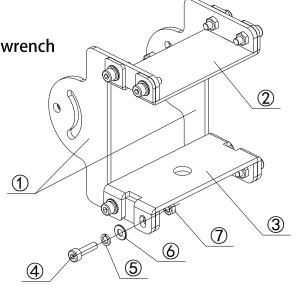

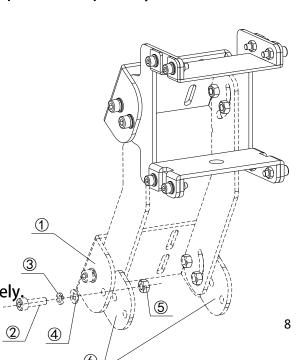

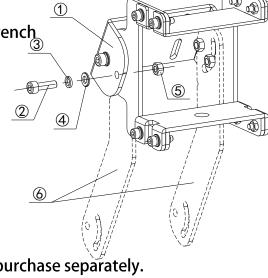


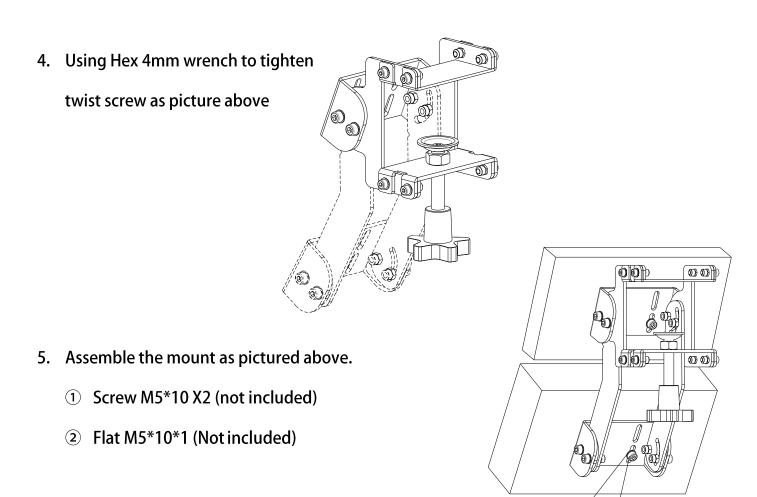

- 6. Place the whole set with clipper to the edge of the desk
  - 1 Twist the screw to the position that equipment will stand firm, do not over- tighten it or it may cause damage to the mount.


1

- 2 Minimum width of the clipper 15mm, Max 50mm
- 3 Connection panel 1 adjustable angle is 50
- 4 Adjustable Angle between two connection panel is 80

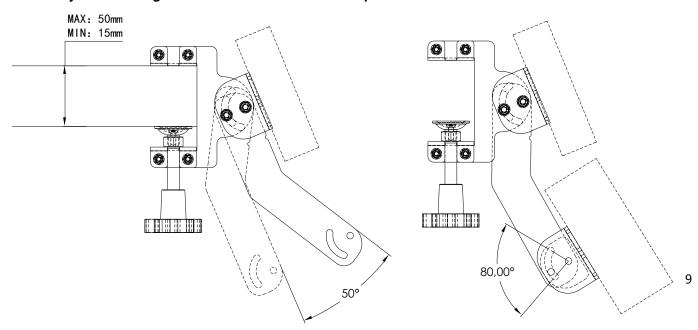


### 5.4 Attach the panel to mount

1. We have ready a 80MM set for you to attach to a mount.

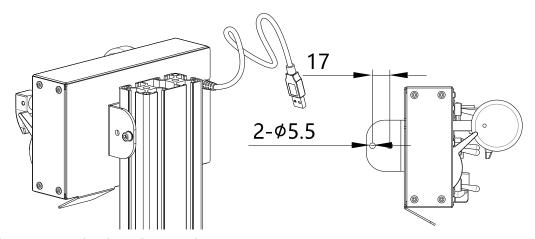

2. The hole was punched as shown above

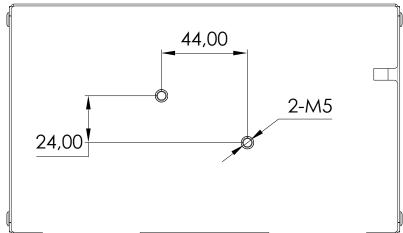

\* This is the final version. all other updates will be online.

# 成都翼胜科技有限责任公司

WWW.WINWING.CN

INFO@WINWING.CN

成都市郫都区现代工业港长生桥路 1111 号 19 栋